



**MOTOROLA**



*JAZZ*™

**USER'S GUIDE**

# CONTENTS

## Introduction

|                    |   |
|--------------------|---|
| Introduction ..... | 1 |
| Controls .....     | 2 |

## Getting Started

|                                 |   |
|---------------------------------|---|
| Turning the Pager On/Off .....  | 3 |
| Backlight .....                 | 4 |
| Setting the Time and Date ..... | 5 |

## Messages

|                                  |   |
|----------------------------------|---|
| Types of Messages .....          | 6 |
| Choosing the Scroll Speed .....  | 6 |
| Receiving/Reading Messages ..... | 7 |
| Duplicate Messages .....         | 9 |

## Alerts

|                                 |    |
|---------------------------------|----|
| Choosing the Alert Mode .....   | 9  |
| Choosing a Pleasing Alert ..... | 11 |

## Alarms

|                      |    |
|----------------------|----|
| Setting Alarms ..... | 12 |
|----------------------|----|

## Message Features

|                         |    |
|-------------------------|----|
| Storing Messages .....  | 20 |
| Deleting Messages ..... | 21 |

|                                 |    |
|---------------------------------|----|
| Locking/Unlocking Messages..... | 22 |
|---------------------------------|----|

## Information Services

|                                |    |
|--------------------------------|----|
| Reading a Message .....        | 24 |
| Turning the Alert On/Off ..... | 26 |
| Deleting a Message .....       | 26 |

## Phone Directory

|                                 |    |
|---------------------------------|----|
| Entering an Entry .....         | 27 |
| Adding a Received Message ..... | 30 |
| Deleting an Entry.....          | 31 |

## Optional Features

|                                  |    |
|----------------------------------|----|
| Travel Clock and Travel Alarm... | 32 |
| QuickNotes.....                  | 36 |

## Other Features

|                              |    |
|------------------------------|----|
| Special Pager Displays ..... | 38 |
|------------------------------|----|

## Use and Care Information

|                            |    |
|----------------------------|----|
| Cleaning Your Pager.....   | 39 |
| Functionality and Use..... | 39 |
| Care and Maintenance.....  | 39 |

## Battery

|                          |    |
|--------------------------|----|
| Battery Information..... | 40 |
|--------------------------|----|

## **Introduction**

Congratulations on purchasing the Motorola® Jazz pager. The Jazz pager incorporates the latest in paging technology. FLEX technology extends battery life up to four times longer than ordinary pagers and improves the ability to receive pages.

This compact pager combines messaging and time keeping functions in a package that is convenient to carry. Full understanding of what this product offers begins with reading this user's guide. This user's guide includes a detachable Quick Reference Card on the back cover.

## **Effective Use of Your Pager**

 
Your pager can help you keep in contact with everyone important to you. By giving your pager number to your business associates, family, and friends, you can be contacted when necessary.




If you have a cellular phone, give your pager number instead of your cellular number. Then you can decide who to call back on your cellular phone without paying for incoming calls.

## **Sending a Test Page to Yourself**

After you have read this user's guide and your pager has been activated by your service provider, send yourself a test page.
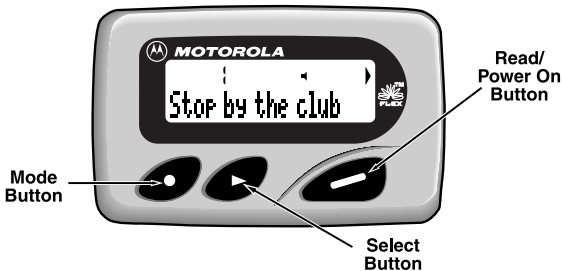
## Controls





-  The Mode button can be pressed repeatedly, pressed and held to scroll through available choices, or to increment a value.
-  The Select button is used to select and confirm a value.
-  The Read/Power On button is used to read a message, to save a setting, to turn on the pager, or to turn on the backlighting.

## Turning the Pager On/Off
 
### To Turn On

1




- From the OFF mode, press .

 
2



- This Startup screen displays momentarily and the pager either alerts audibly or vibrates.

**Note:** The Startup alert can be skipped by pressing .



3




- The Standby screen displays the time, date and the AUDIBLE alert icon ◀ (or VIBRATE alert icon ✖).


### To Turn Off

 1

- From the Standby screen, press and release  until **CONTROLS?** displays. Press  to enter the **CONTROLS** menu.

②




- Press  to set the pager to OFF mode.

③











- The OFF screen displays without any alert icon.

## Backlight

 
- Press and hold  for one second or more to activate the LCD screen backlight. When you have finished reading your messages and the Standby screen is displayed, the backlight remains on for four seconds before automatically turning off.

## Setting the Time and Date

- 1 • From the Standby screen, press and release  until **CONTROLS?** displays. Press  to enter the **CONTROLS** menu. Then press   to enter **TIME-DATE** mode.











- 2 
  - Press  to set the hour to the desired value.
  - Move to the Minute, A.M./P.M., Date and Month fields by pressing , then press  to set the value for each field.

**Note:** To display a 24-hour clock, set the AM/PM field to \_.

- Press  from any field to set and exit.






## Types of Messages

The message indicators define the type of message received and flash until the message is read.

| Message Type         | Unselected  | Selected  |
|----------------------|---|---|
| Personal             |  |  |
| Phone Directory      |  |  |
| Information services |   |   |
| when received        |  |  |
| when selecting       |  |  |
| when chirp is on     |  |  |

 
## Choosing the Scroll Speed



You can choose the speed at which your messages scroll, or read them line by line.

- From the Standby screen, press and release  until **CONTROLS?** displays. Press  to enter the CONTROLS menu, then press    to enter the SCROLL SPEED menu.




②



- Press  to choose the SCROLL SPEED you desire.
- Press  to set and exit.



**Note:** There are four scroll speeds: LINE-BY-LINE, SLOW, MEDIUM and FAST.





## Receiving/Reading Messages

 
 
 
When a message is received, the pager either alerts audibly (AUDIBLE, CHIRP, ESCALERT and all PLEASING modes except NO ALERT) or vibrates (VIBRATE mode). If the NO ALERT mode is selected, no alert happens for normal messages. The unread message indicator  (normal message) flashes. The slot number of the latest message displays on top.



①



- Press  to display the message status screen. Press  to read the latest message.





**Note:** The flashing unread message indicator  changes to  when it is selected. To read a different message, press  to select the message slot number, then press .



- The first screen of the message displays. If the message is longer than one screen display, a message continued indicator ▶ appears on the top line until the last screen is displayed.
  - If the pager is set to scroll the message automatically (SLOW, MEDIUM or FAST scroll speeds) the remainder of the message is displayed at that speed.
  - If the scroll speed is set to LINE-BY-LINE, the remaining screens will automatically display one line at a time every few seconds.
- Note:** To pause the message in any scroll mode, press . Press again to continue. In LINE-BY-LINE mode, continue pressing  until the last screen is displayed.
- The last screen displays the time and date the message was received. After an interval, the pager returns to the standby screen.

**Note:** If a message is unread and audible alerts are chosen, the pager gives a periodic alert until all unread messages are read. This alert will continue for up to 30 minutes. A message is considered read if any part of the message is displayed.




## Duplicate Messages

 
- 
  - 
- If a duplicate personal message is received, the Duplicate icon  displays on top.
  - Press  to view the duplicate message.
  - The word DUPLICATE displays before the duplicate message is displayed.


## Choosing the Alert Mode

You can choose one of four alert modes: AUDIBLE, VIBRATE, CHIRP, or ESCALERT.


**Note:** In ESCALERT mode, the alert grows increasingly louder. In AUDIBLE mode you can set a PLEASING alert or NO ALERT.


- ① • From the Standby screen, press and release  until ALERTS? displays. Press  to enter the ALERTS menu. Press  again to enter the ALERT MODE menu.





 - Press  until the desired alert mode displays (e.g. VIBRATE).







- The pager gives off a sample of each displayed alert. Press  to set and exit.




- The Standby screen displays with either  (the audible alert icon) or  (the vibrate alert icon), depending on which alert mode was chosen.

## Choosing a Pleasing Alert


If you select the AUDIBLE alert mode, you can choose the standard alert, NO ALERT, or one of eight PLEASING alerts.

 
- 1 • From the Standby screen, press and release  until ALERTS? displays. Press  to enter the ALERTS menu. Press   to enter the PLEASING alert menu.




- Press  until the desired alert mode displays (e.g. ARPEGGIO).



- The pager gives off a sample of each displayed alert. Press  to set and exit.



- The Standby screen displays with the Audible alert icon .




 



**Note:** If you choose NO ALERT or VIBRATE, the pager gives off an audible alert only if a priority alert is received. To stop an alert, press any button.





## Setting Alarms

  There are three types of alarms: REMINDER, GENERAL and EVENT. If the pager is in OFF mode when an alarm expires, it turns on, alerts according to the alert mode, and remains on. If the pager is in NO ALERT mode, an alarm causes an audible alert.

### REMINDER Alarm





A single REMINDER alarm can be set to expire within 60 minutes or less.


- 1 • From the Standby screen, press and release  until ALARMS? displays. Press  to enter the ALARMS menu. Press  again to enter the REMINDER menu.
- 2  • Press  to set the alert time. In this example, the pager is set to alert 45 minutes from the time the alarm is set.  
**Note:** When setting the alert time, the value starts with OFF, then 1 through 60, then OFF again.
- 3  • Press  to set and exit.

- 4  The Standby screen displays with the Alarm icon .
- 5  When a REMINDER alarm expires, this displays and the pager alerts. Press any button once to stop the alarm, and again to clear the message.
- 6  If the alarm is not stopped during activation, the Alarm icon flashes. Press any button once to read the message, and press again to clear.


### GENERAL Alarms

 You can set one GENERAL alarm. This can be set to alert on a daily basis or one-time only.


- 1 • From the Standby screen, press and release  until ALARMS? displays. Press  to enter the ALARMS menu. Press   to enter GENERAL alarms mode.



 - Press , then press until (the enable alarm icon) displays. Press to move to the next field.




 - Press until (the enable alert icon) displays. Press to move to the next field.




- Press to set the hour to the desired value, then press to move to the Minute field.
- Press to set the minutes to the desired value. Move to the A.M./P.M., Day and Month fields by pressing , then press to set the value for each field.
- Press in any field to set and exit.

 **Note:** To alert on a daily basis set the Day and Month to --/--.




 - The Standby screen displays with (the enable alert icon).





 - When a GENERAL alarm expires, this screen displays and the pager alerts.
- Press any button once to stop the alarm, and again to clear the message.






- If the GENERAL alarm is not stopped during activation, the ALARM icon flashes.
- Press any button once to read the message, and press again to clear.






**Note:** You can temporarily disable a daily alert (for example, on a weekend). To disable the alert, follow these steps.

1. From the Standby screen, press and release until ALARMS? displays. Press to enter the ALARMS menu. Press to enter GENERAL alarms mode.
2. Press to move to the alert enable/disable field.
3. Press until (the disable alert icon) displays.
4. Press to set and exit. The *alarm* remains set and enabled, but the *alert* won't occur until it is re-enabled.








To re-enable the alert, follow these steps.

1. From the Standby screen, press and release until ALARMS? displays.

Press  to enter the ALARMS menu. Press   to enter GENERAL alarms mode.






2. Press   to move to the alert enable/disable field. Press  until  (the enable alert icon) displays.
3. Press  to set and exit.

To disable (erase) the alarm settings, follow these steps.

1. From the Standby screen, press and release  until ALARMS? displays. Press  to enter the ALARMS menu. Press   to enter GENERAL alarms mode.
2. Press , then press  until -- (the disable alarm icon) displays. Press  to set and exit.

### ***EVENT Alarms***

You can set up to three EVENT alarms. Each EVENT alarm allows you to keep a special reminder message that displays when the alarm is activated and the pager alerts. These can be set to alert either on a daily basis or one-time only.

- 1 • From the Standby screen, press and release  until ALARMS? displays. Press  to enter the ALARMS menu. Press    to enter EVENT alarm mode.



- Press to choose EVENT alarm 01, 02 or 03.
- Press , then press until (the enable alarm icon) displays. Press to move to the next field.



- Press until (the enable alert icon) displays and press to move to the Message field.



 
- Press to scroll through the characters available, then press to move to the next.

**Note:** You can enter up to 14 characters (letters, numbers or spaces). If the message is less than 14 characters long, advance to the rubout character () and press to fill the remaining character fields with blanks.



- At the last character field, press to move to the alarm Time-Date screen.

6




- Press to set the hour to the desired value.
- Move to the Minute, AM/PM, Day and Month fields by pressing , then press to set the value for each field.
- Press in any field to set and exit.

**Note:** You may only set one EVENT alarm at a time. You must press to save each event alarm prior to setting the next alarm.

**Note:** To alert on a daily basis set the Day and Month to --/--.

 7




- The Standby screen displays with (the enable alert icon).

 8














- When an EVENT alarm expires, the message displays and the pager alerts. Press any button once to stop the alarm, and again to clear the message.

9








- If the EVENT alarm is not stopped during activation, the ALARM icon flashes.
- Press any button once to read the message, and press again to clear.







**Note:** You can temporarily disable a daily alert (for example, on a weekend). To disable the alert, follow these steps.

1. From the Standby screen, press and release  until ALARMS? displays. Press  to enter the ALARMS menu. Press    to enter EVENT alarms mode.
2. Press  until the EVENT alert you want to disable displays. Press   to move to the alert enable/disable field.
3. Press  until  (the disable alert icon) displays.
4. Press  to set and exit. The *alarm* remains set and enabled, but the *alert* won't occur until it is re-enabled.










To re-enable the alert, follow these steps.

1. From the Standby screen, press and release  until ALARMS? displays.

Press  to enter the ALARMS menu. Press    to enter EVENT alarms mode.

2. Press  until the EVENT alert you want to re-enable displays. Press   to move to the alert enable/disable field.
3. Press  until  (the enable alert icon) displays.
4. Press  to set and exit.





To disable (erase) the alarm settings, follow these steps.

1. From the Standby screen, press and release  until ALARMS? displays. Press  to enter the ALARMS menu. Press    to enter EVENT alarms mode.
2. Press  until the EVENT alarm you want to disable displays. Press , then press  until -- (the disable alarm icon) displays. Press  to set and exit.

## Storing Messages




Your pager can store up to 16 personal messages. Each stored message is assigned a number, which displays when the message is stored. The first message received is 1, the second is 2, and so on.

## Deleting Messages One-at-a-Time

- 
  - While reading a message, press  until DELETE displays.
- 
  - Press  to delete.

## Deleting all Messages at Once

The DELETE ALL command deletes all read and unlocked messages and information services. Locked or unread messages are not deleted.

- 
  - From the Standby screen press  until DELETE ALL? displays, then press  to delete all.

## Automatic Message Deletion

If all message slots are full and a new message is received, the oldest unlocked read message is automatically deleted.

- When the message memory is full, MEMORY FULL displays.
- If all messages are unread, the oldest, unlocked message is deleted and OVERFLOW displays.

## Locking/Unlocking Messages

By locking messages, you can protect messages from being:



- Deleted with the DELETE ALL function.
- Replaced when the pager's memory is full, as indicated by MEMORY FULL.

Messages can be locked only while reading them.

### Locking Messages



1







- Press , then press  to select the message to be locked. Press  to read the message.

2










- Press and release  until LOCK?  displays.



- ③ 
- Press . The message is now locked.
- ④ 
- When a locked message is selected or read, the icon  displays on top.

 
**Note:** When you have locked 8 messages, LOCK FULL displays when you try to lock the next message. To lock the next message, you must first unlock one message.

### Unlocking Messages

- ① 
- Press , then press  to select the message to be unlocked. Press  to read the message.
- ② 
- Press  until UNLOCK?  displays.



- Press  to unlock the message.








- The lock icon disappears.

## Reading Information Service Messages

   Information service messages are usually sent by information service providers. Information service messages are typically news or financial reports which provide information that is important for a short time (a few hours). This pager can store up to five information service messages.



- When an information service message is received,  flashes and the number of unread information service messages displays on the message status screen. If no key is pressed for 12 seconds, the standby screen displays. Press  to return to the message status screen.



- Press to move to the message you want to read. The flashing unread message indicator changes to when it is selected. Press to read the message.
  - The first screen of the message displays. If the message is longer than one screen display, a message continued indicator appears on the top line until the last screen is displayed.
  - If the pager is set to scroll the message automatically (SLOW, MEDIUM or FAST scroll speeds) the remainder of the message is displayed at that speed.
  - If the scroll speed is set to LINE-BY-LINE, the remaining screens will automatically display one line at a time every few seconds.
- Note:** To pause the message in any scroll mode, press . Press again to continue. In LINE-BY-LINE mode, continue pressing until the last screen is displayed.

5





- The last screen displays the time and date the message was received. After an interval, the pager returns to the standby screen.

## Turning the Information Service Alert On and Off

 You can set the pager to alert when a information service message is received.


1



- While reading an information service message, press  until CHIRP ON? or CHIRP OFF? displays .

2




- Press  to turn CHIRP ON or OFF.

## Deleting an Information Service Message

 An information service message can be deleted with the DELETE command.

1



- While reading an information service message, press  until DELETE? displays .

②


 



 
- Press  to delete.

## Phone Directory

 
The PHONE-DIR is a reference for up to ten entries, each with a name, associated phone number and special alert. Each name can be up to eight characters long and each phone number must be from three to 13 digits long. No spaces or hyphens may be entered. You can also set the pager to block out pages from specific numbers in the PHONE-DIR. When a new numeric message is received, it may be added to the phone directory while reading the message.

### *Entering a Phone Directory Entry*

- ① • From the Standby screen, press and release  until DIRECTORY? displays. Press  to enter the DIRECTORY menu. Press  to enter PHONE-DIR mode.




- Press to choose the desired PHONE-DIR slot number ( 01 - 10 ), then press to move to the next field.
- Press to enable ( ) the entry, then press to move to the Name field.



- Press to select the first character, then press to move to the next.
- Repeat the above step until you have entered the entire name.

 
**Note:** If the name is less than eight characters long, you can use the rubout character ( ) to fill the remaining slots with blanks. After entering the last character of the name, move to the next character and press until the rubout character ( ) displays. Press until all remaining slots are filled with blanks.



**Hint:** When selecting characters, the order in which they are displayed is A-Z, 0-9, a blank character, and then the rubout character followed by A again. If you go past the character you want, press and hold until the character displays again.




 
- At the last character press to move to the Phone Number screen.

5




 
- Press  to select the first digit, then press  to move to the next.
- Repeat the above step until you have entered the entire phone number.


**Note:** If the telephone number is less than 13 digits, advance to the rubout character (  ) and press  to fill the remaining slots with blanks. Spaces cannot be entered in phone numbers.


- At the last digit press  to move to the Alert field.

 6




- Press  to select the desired Alert ( 0 - 9 ), or " - " for page blocking.

**Note:** The pager gives off a sample alert each time  is pressed. The page blocking feature prohibits pages from the entered numbers.

- Press  to set and exit.

 7




 
- When a message is received that matches a PHONE-DIR number, the associated PHONE-DIR name (WENDY) displays before it.

### ***Adding a Received Message to the Phone Directory***

When you receive a message that contains only a phone number, you can add that number to the phone directory.

 

**Note:** Any dashes, parentheses or spaces in the number are deleted before storing.

1


- While reading a message, press  until PHONE-DIR? displays and press  to enter it. The phone number of the message being read is automatically assigned the next available PHONE-DIR slot. The Name field is then displayed.

2



 - Press  to select the first character of the Name field, then press  to move to the next field.
- Repeat the above step until you have entered the entire name.






- At the last character, press to set and move to the Phone Number screen. Press to select the desired Alert ( 0 - 9 ), or " - " for page blocking.
- Press to set and exit.


### Deleting an Entry

 PHONE-DIR entries are deleted when disabled. You may also edit an entry and erase the characters using the rubout characters.

- ① • From the Standby screen, press and release until DIRECTORY? displays. Press to enter the DIRECTORY menu. Press to enter PHONE-DIR mode.



 - Press to select the PHONE-DIR entry you want to delete (e.g. 02 JOHN), then press to move to the Enable/Disable field.







- Press to disable ( -- ) this entry, then press to delete it and exit.


## Optional Features



 The Travel Clock, Travel Alarm and QuickNotes are optional features that may be available on your pager. If these features are not currently available and you would like to take advantage of them, contact your paging service provider.

### *Setting the Travel Clock*


The Travel Clock (when activated) allows you to display an additional 24-hour clock in the upper left-hand portion of the display. This Travel Clock can also be set to a different time from the main clock. This can be helpful when traveling to different time zones.




- 1 • From the Standby screen, press and release  until TRAVEL? displays. Press  to enter the TRAVEL menu, then press  to enter TRAVEL TIME mode. The Forward Time/Backward Time field ( - ) flashes.
- 2 • To set a travel time that is different from the main clock, press  to choose between forward ( + ) or backward ( - ) time in relation to the current time.




 - Move to the Hour and Minute fields by pressing , then press  to set the value for each field.


**Note:** To display a 24-hour clock with the same time as the main clock, set the Hour and Minute fields to zero.



  - Move to the ON/OFF field by pressing , then press  to choose ON or OFF. Press  to set and exit.







- The Standby screen displays with the Travel Clock time in the top left corner. This example shows a 1 hour forward time.



- This example shows a 24-hour clock with the same time as the main clock.








**Note:** When messages are received the travel clock display alternates with the number of unread messages until all the messages are read.


## Setting the Travel Alarm

 
- ① • From the Standby screen, press and release  until TRAVEL? displays. Press  to enter the TRAVEL menu. Press   to enter TRAVEL ALARM mode.


 
**Note:** A Travel Alarm is set on the Travel Clock time, not the main clock time.



- Press  until  (the enable alert icon) displays. Press  to move to the next field.
- Press  to set the Hour field to the desired value. Press  to move to the Minute field and press  to set the minute to the desired value.
- Press  from any field to set and exit.










- The Standby screen displays with the  icon.








- 4 
- When a Travel alarm expires, this screen displays and the pager alerts.
  - Press any button once to stop the alarm, and again to clear the message.
- Note:** If the pager is off when an alarm expires, it turns on, alerts and remains on.
- 5 
- If the Travel alarm is not stopped during activation, the ALARM icon flashes.
  - Press any button to read the alarm message, and again to clear the message.

**Note:** The Travel Clock and Travel alarm display in 24-hour time only.

**Note:** You can temporarily disable the Travel alert (for example, on a weekend). To disable the alert, follow these steps.

1. From the Standby screen, press and release  until TRAVEL? displays. Press  to enter the TRAVEL menu. Press   to enter TRAVEL ALARM mode.
2. Press  until  (the disable alert icon) displays.
3. Press  to set and exit. The *alarm* remains set and enabled, but the *alert* won't occur until it is re-enabled.

To re-enable the alert, follow these steps.

1. From the Standby screen, press and release  until TRAVEL? displays. Press  to enter the TRAVEL menu. Press   to enter TRAVEL ALARM mode.
2. Press  until  (the enable alert icon) displays.
3. Press  to set and exit.

### **QuickNotes**

QuickNotes are short messages that can be displayed when you are paged. There are 10 QuickNotes permanently stored in the memory of the pager. The person paging you activates these messages by entering a code number instead of their phone number.

To send QuickNotes, the person paging you enters \*\*, then the message code number, and then \*\*.

Example: Entering code \*\*01\*\* displays **Running Late** on the message screen.


See the list of available codes below.



**Note:** QuickNotes are subject to change. See your paging service provider to verify the QuickNotes list.

| When the person paging you enters this code... | this displays on the message screen. |
|--|--------------------------------------|
| **01**   | Running late                         |
| **02**   | I'm on my way                        |
| **03**   | Pick me up                           |
| **04**   | I'm home                             |
| **05**   | Come home                            |
| **06**   | Call home                            |
| **07**   | Call office                          |
| **08**   | Call school                          |
| **09**   | I love you                           |
| **10**   | I miss you                           |

## Special Pager Displays


 
### *Low Battery*

Your pager warns you if the battery level is low. If the pager is on between 8:00am and 10:00pm, **LOW CELL**  displays and an alert sounds.



Between 10:00pm and 8:00am, only **LOW CELL**  displays (no alert sounds). If the pager is off,  displays. Change the battery within five days of receiving a low-battery indication.

**Note:** Turn the pager off before changing the battery to save messages.

### *Out of Range*

 If your pager is equipped with this optional feature,  displays if you are outside your paging coverage area and the pager cannot receive messages. The out-of-range indicator  no longer displays when you return to your paging coverage area.

### *Special message icons*

- If  displays at the end of the message, there is an error in the message received.
- If  displays at the end of the message, either the message was too long, or there was not enough memory to store the message.



## **Cleaning Your Pager**

To clean the pager housing, use a soft, non-abrasive cloth moistened in a mild soap and water solution. Rinse the surface using a second cloth moistened in clean water. Do not immerse the pager in water. Do not use alcohol or any other cleaning solutions.

## **Functionality and Use of Your Pager**

 
For questions pertaining to the functions and use of your Motorola pager please visit our web site at [www.motorola.com/pagers](http://www.motorola.com/pagers) or in the U.S. call 1-800-548-9954 or 1-800-793-7834 (TDD). For questions pertaining to your paging service, contact your paging service provider.

## **Care and Maintenance**

Jazz™ pagers are durable, reliable, and can provide years of dependable service; however, they are precision electronic products. Water and moisture, excessive heat, and extreme shock may damage the pager. Do not expose your pager to these conditions. If repair is required, the Motorola Service Organization, staffed with specially trained technicians, offers repair and maintenance facilities throughout the world.

You can protect your pager purchase with an optional extended warranty covering parts and labor. For more information about warranties, please contact either your paging service provider, retailer, or Motorola, Inc. at 1-800-548-9954. For repairs, call Motorola, Inc. at 1-800-548-9954 in the U.S. or 1-800-323-9685 in Canada. In the U.S., to contact Motorola, Inc. on your TDD, call 1-800-793-7834.

## Battery Information

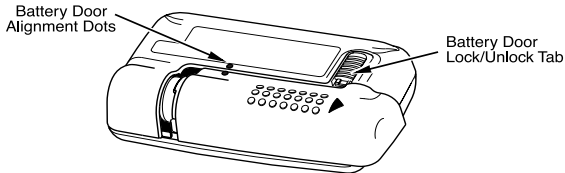

Your Jazz™ pager operates with one AAA-size alkaline battery (carbon zinc batteries are not recommended).

## ***Replacing the Battery***

**Note:** Turn the pager off before changing the battery to save messages.

- ➊ Turn the pager off.
- ➋ To remove the old battery, slide the Lock/Unlock tab away from the battery door to unlock the door. Hold the pager in both hands and slide the door until the locking tabs release and the Battery Door Alignment Dots align. Lift the door until it is free of the housing.
- ➌ Remove the battery.
- ➍ Align the new battery matching the illustration on the inside of the battery chamber. Insert the battery.
- ➎ Replace the battery door by aligning the grooves on the door with the grooves on the housing. Slide the battery door until it is fully closed. Lock the battery door by sliding the Lock/Unlock Tab on the housing toward the battery door.

## Patent Information

This Motorola product is manufactured under one or more Motorola U.S. patents. A partial listing of these patents is provided on the inside surface of the battery door. Other U.S. patents covering this product are pending.

Ⓜ, Motorola, FLEX, , Jazz and QuickNotes are trademarks or registered trademarks of Motorola, Inc.

© 1997 by Motorola, Inc. All Rights Reserved.

Paging Products Group 1500 Gateway Boulevard Boynton Beach, Florida 38426  
Printed in U.S.A. 8/97





























6881029B95-O
















 













RAD DEV FOR HAZ LOC INT SAFE: I,ABCD:DIV2:II,FG  
1.5 AAA ALK T3C LISTED 830H


 







# Jazz™ Quick Reference Card

## Symbols

 
- |   |   |
|---|---|
|  Power On Indicator              |  Set Event Alarm                   |
|  Set Power Off                   |  Set Time-Date                     |
|  Set Alert Mode                  |  Phone Directory Message Indicator |
|  Set Audible Alert               |  Alarm Message Indicator           |
|  Set Vibrate Alert               |  Message Indicator Unselected      |
|  Set Chirp Alert                 |  Message Indicator Selected        |
|  Set Chirp Off                   |  Alerts                            |
|  Set Pleasing Alert              |  Lock Message                      |
|  Set Pleasing Alerts 1-8 (A1-A8) |  Unlock Message                    |
|  Set No Alert                    |  Delete All Messages               |
|  Set Escalart                    |  Delete Selected Message           |
|  Set Alarm Mode/Set Travel Alarm |  Set Slow Scrolling Speed          |
|  Expired General Alarm           |  Set Medium Scrolling Speed        |

-  Set Reminder Alarm
-  Expired Reminder Alarm
-  Set General Alarm
-  Memory Overflow
-  Memory Full
-  Silent Alert Mode Indicator
-  Audible Alert Mode Indicator
-  No Alarm Indicator
-  Alarm Indicator
-  Duplicate Lock Indicator
-  Lock Indicator
-  Low Cell Indicator
-  Message Continued Indicator
-  Enable Entry
-  Set Fast Scrolling Speed
-  Set Line by Line Scrolling Speed
-  Set Directory
-  Set Phone Directory
-  Pager Disabled
-  Information Service Indicator Unselected
-  Information Service Indicator Selected
-  Low Cell
-  Out of Range Indicator
-  Mailbox Unselected
-  Mailbox Selected
-  Disable Entry
-  Duplicate Message










 



## Setting the Time and Date




- 1 Press and release  until CONTROLS?  displays.
- 2 Press . Press and release  until TIME-DATE?  displays.
- 3 Press . Press and release  repeatedly to set the hour.
- 4 Move to the Minute, A.M./P.M., Day and Month fields by pressing , then press  to set the value for each field.

**Note:** Set A.M./P.M. to \_ to display a 24-hour clock.

- 5 Press  to save your changes. The Standby screen displays.

## Setting the Alarm

- 1 From the Standby screen, press and release  until ALARMS? displays.
- 2 Press  to enter the ALARMS menu.
- 3 Press   to enter GENERAL alarms mode.
- 4 Press , then press  until  (the enable alarm icon) displays. Press  to move to the next field.
- 5 Press  until  (the enable alert icon) displays. Press  to move to the next field.
- 6 Press  to set the hour to the desired value, then press  to move to the Minute field.

- 7 Move to the A.M./P.M., Day and Month fields by pressing , then press  to set the value for each field.
- 8 Press  to set and exit.

## QuickNotes

When the person paging you enters this code...

\*\*01\*\*

\*\*02\*\*

\*\*03\*\*

\*\*04\*\*

\*\*05\*\*

\*\*06\*\*

\*\*07\*\*

\*\*08\*\*

\*\*09\*\*

\*\*10\*\*

this displays on the message screen.

Running late

I'm on my way

Pick me up

I'm home

Come home

Call home

Call office

Call school

I love you

I miss you